



Spreader-Bar Collar



Parts ID Manual

Model Number: SB-016/A

Revision: A

© Copyright 2022 by DEMTECH Services, Inc.

All Rights Reserved

Scope of Manual:

This manual contains procedures for safety, general unpacking, set-up, and operation of your DEMTECH Services, Inc. Spreader-Bar Collar .

The text of this publication, or any part thereof, may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, storage in an information retrieval system, or otherwise, without prior written permission of DEMTECH Services, Inc.

Notice

Patents have been granted and/or patent applications are pending or are in the process of preparation on all DEMTECH Services, Inc. developments.

The material in the manual is for informational purposes only and is subject to change without notice.

DEMTECH Services, Inc. assumes no responsibility for any errors that may appear in this manual.

Manual Number: **SB-COLLAR PARTS ID MANUAL, Revision: A**


DEMTECH Services, Inc.
6414 Capitol Avenue Diamond Springs, CA 95619 U.S.A.
Telephone: (530) 621-3200
Toll Free: (888) 324-9353
Fax: (530) 621-0150
Web Site: www.demtech.com


TABLE OF CONTENTS

1 ORDER INSTRUCTIONS.....	PAGE 1
1.1 SB-016/A – ASSY, SPREADER-BAR COLLAR (Parts ID).....	Page 2
1.2 SB-016/A – ASSY, SPREADER-BAR COLLAR (Parts List).....	Page 3

1 Order Instructions

Refer to the diagrams and related parts lists on the following pages to identify replacement parts for the Spreader-Bar Collar. To locate a part, find it visually on the exploded assembly diagram and note its Reference Number. Next refer to the assemblies parts list to identify the corresponding Part Number using the Reference Number. When ordering parts, be sure to specify the Part Number not the Reference Number. ***NS-Hardware*** refers to non-stock items, these parts are still available for order, please provide the part description to order NS-Hardware items.

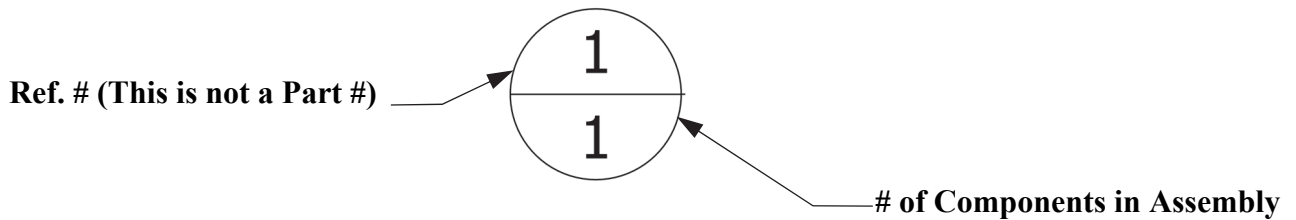

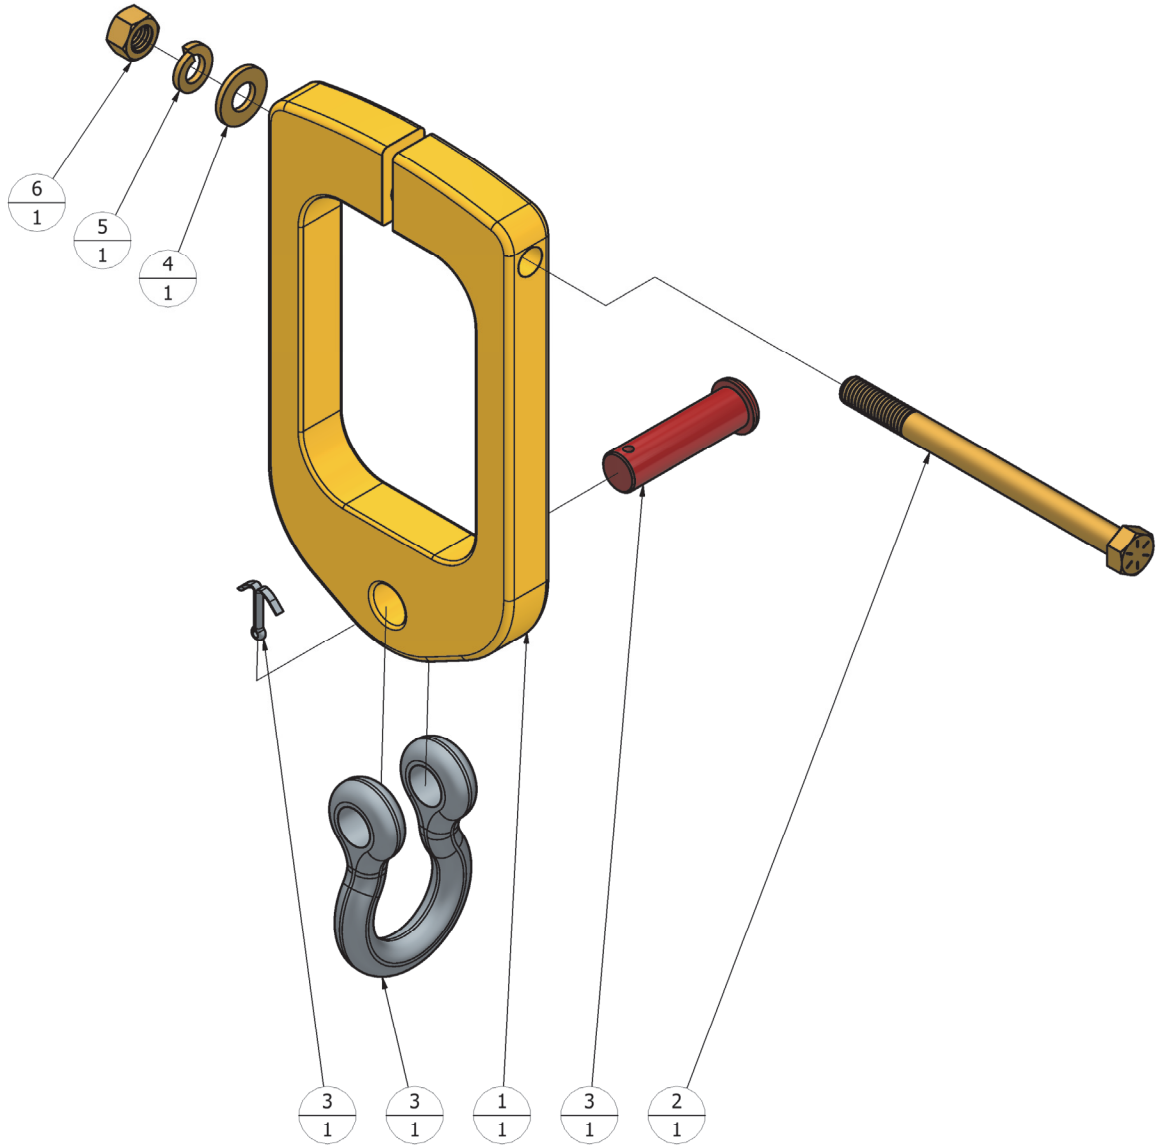

**1.1 SB-016/A – ASSY, ADJUSTABLE COLLAR, SPREADER-BAR
(Parts ID)**

Parts List			
REF. NO	PART NO.	DESCRIPTION	QTY
1	SB-016	MOUNT, ADJUSTABLE, SPREADER-BAR	1
2	SB-020	BOLT, HEX, 1/2"-13 X 6-1/2", GRADE 8, ZINC YELLOW-CHROMATE PLATED	1
3	SB-M-008	SHACKLE, ROUND PIN ANCHOR, 5/8", 3-1/4 TON WORKING LOAD LIMIT	1
4	NS-HARDWARE	WASHER, 1/2" SCREW SIZE, ZINC YELLOW-CHROMATE PLATED	1
5	NS-HARDWARE	WASHER, SPLIT, 1/2", GRADE 8	1
6	NS-HARDWARE	NUT, HEX, GRADE 8, 1/2"-13	1

**1.2 SB-016/A – ASSY, ADJUSTABLE COLLAR, SPREADER-BAR
(Parts List)**